Hitachi OCR Scanner HT-4139

Installation Guide

QG3 20100324


1 Check Contents of Package


Hopper x 1	Stacker guide x 1	USB cable x 1	Scanner Driver Installation Guide x 1
Output Tray x 2	(Screw x 1)	Instruction Manual x 1	Scanner Driver Installation CD x 1
(Screw x 6)	PS cable x 1	Quick Guide x 4	Ink Ribbon x 1 (Installed in the device)

2 Remove Mirror Protection Sheet

(1) Peel off the tape from the Main Unit and the Hopper


(2) Push the Main Latch Button to open the Main Cover, and remove the Mirror Protection Sheet and Support Plate.

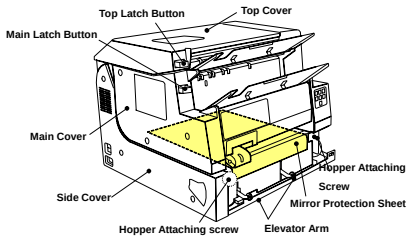

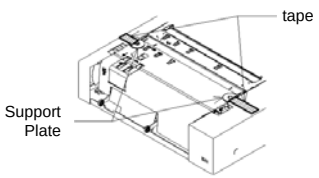


3 Attach Hopper

(1) Move the Elevator Arms down as shown in the picture below.

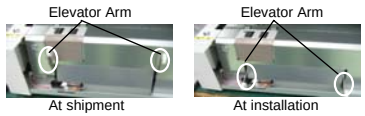

(2) Remove the Hopper Cover by removing 2 screws.
(3) Loosen the Hopper Attaching Screw at the left of the device and attach the Hopper ASSY. See Note below. Lift theHopper Plate so that the Elevator Arm will be under the Hopper Plate.
(4) Lift the Hopper Plate so the Elevator Arm will be under the Hopper Plate.
(5) Secure the Hopper with screws and attach the Hopper Cover.
(6) Close the Main Cover by pushing the "PUSH" labels on both sides of the Main cover.

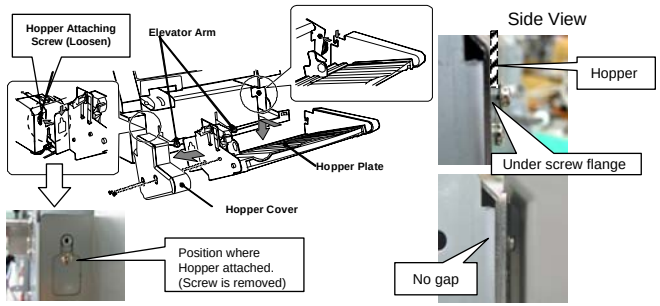

Note: Do not loosen the Hopper Attaching Screw too much. It may create a gap between the attachments, causing a glitch.


4 Attach Output Tray

(1) Push the Top Latch Button to open the Top Cover

(2) Attach the Output Tray-1 (Stacker-A) ASSY to the Stacker Bracket.
Secure the Output Tray with attached 3 flat-head Phillips screws.


(3) Attach the Output Tray-2 (Stacker-R)ASSY to the Stacker Bracket with the same procedure as shown.

(4) Close the Top Cover

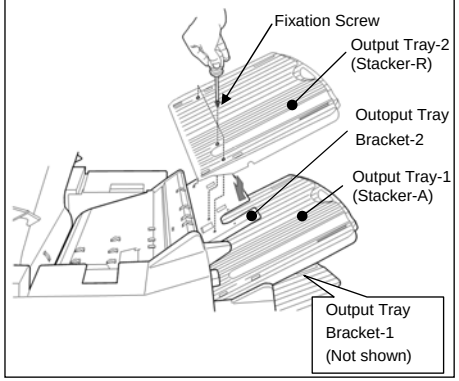


5 Attach Stacker Guide

Secure the Stacker Guide with the Fixation Screw.

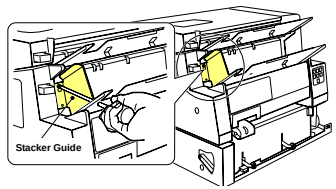


6 Set Ribbon Cassette

(1) Push the Top Latch Button to open the Top Cover.
Push the "PUSH OPEN" Mark area on the Cover(Imprint) and open it.

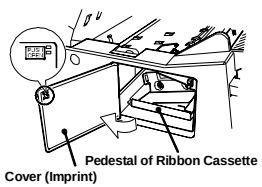


(2) To tighten the Ribbon, turn the knob in the direction of the arrow (clockwise).

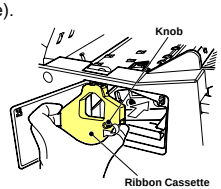

(3) Put the Ribbon Cassette in the Numbering (Imprinting) Cover without catching the tip, and push it to the "INSIDE" position.

(4) Close the Cover (Imprint) and the Top Cover.

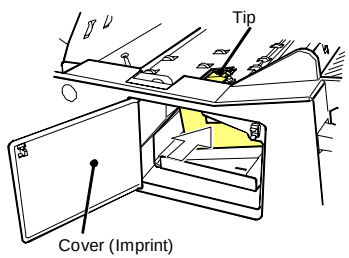

NOTE: However imprint or not the Ribbon Casette or the Dummy Casette should be set.


7 Connect Cables

(1) Connect the power cable to the Inlet connector that is at the side of the device. The other side should be connected to the power outlet.

CAUTION **Do not turn the Power on yet**

(2) Connect the USB cable to the USB connector located at back of the device and secure it with the clamp next to it. (Lock the USB connector)

CAUTION **Do Not connect the USB cable to the PC yet**

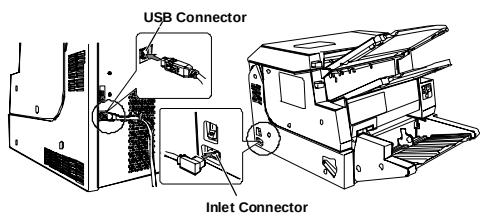

8 Install TWAIN Driver

(1) Install the program from the CD
Please do not connect the HT-4139 scanner yet.
(2) Reboot the host
(3) Connect USB cable to the PC
(4) Turn on the power to the Device
(5) Install the USB driver

9 Contact us

If you have any questions, please contact the distributor.

OMR INDIA OUTSOURCES Pvt. Ltd.
10-A,Old Vijay Nagar Colony,Agra
282004(U.P.),India
Phone +91-562-4004315
Fax +91-562-2523429